


USER MANUAL



Foldable Foot Spa Massager
MODEL: NFFS-FA02

Manufacturer: Aukey International Limited
Web: www.aukey.com
Email: wh@aukeyinternational.com
Add: 401 A/F, Tung Hap Commercial Building, 248 Des Voeux Road Central, Shaung Wan, Hong Kong

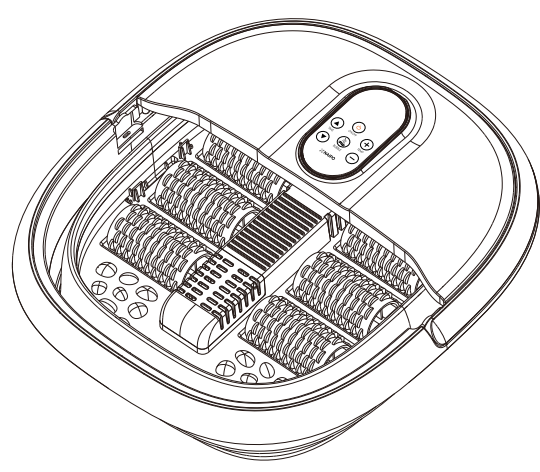

材质: 105g 铜版纸

尺寸: 100 x 140 mm

印刷: 单黑双面印刷

装订方式: 骑马钉装订

(封面内页留白)

Items Included in the package

- 1 x Foot Spa Massager
- 1 x User Manual
- 1 x Pumice Stone
- 1 x Remote Control
- 2 x Supporting frames
- 1 x Type-C Charging Cable
- 1 x Dust Cover

Specifications

Model	NFFS-FA02
Name	Hotso Foot Spa Massager with Full Roller and Heat Bubbles
Voltage frequency	220-240V 50Hz
Power	510W
Unfolded size	43.5*40*30 cm/17.12*15.75*11.8 in
Folding size	43.5*40*17 cm/17.12*15.75*6.7 in
Weight	2.4 kg/5.29 lb
Capacity	10 L/2.64 Gal

Important Safeguard



01. Please do not use the product if it is damaged.
02. Read the user manual carefully before the product is put into use.
03. Please do not use the product without water inside the tub and keep the water volume between minimum line and maximum line. Please disconnect the product from mains supply after use.
04. Please do not stand on the product or put heavy things inside it.

05. Please do not pull the power cable and pull or hit the product by the cable, otherwise it might get damaged.
06. Please make sure that the product is always positioned horizontally.
07. Please stop using the product when uncomfortable feelings occur, such as feeling dizzy and headache.
08. Please make sure that the cable line and plug are dry and keep them away from fire when the product is in use.
09. Please do not fill the tub with liquid of acidity, basicity or corrosivity and liquid containing particles or fibrous.
10. Please do not fill the tub with water above 108 ℉ (42 ℃), otherwise your feet might get burnt or the product might be out of shape because of high temperature.
11. This product is not recommended for people with inflammation, trauma, ringworm and burns on feet.
12. People with heart disease, people with serious embolism and cerebral haemorrhage, pregnant women and people with terminal diabetes are not recommended to use the product without consulting a doctor.
13. Children, people who are disabled (both physically and mentally), sloughy skin and those who are insensitive to heat or cold are recommended to use the product only with assistance from others.
14. Please do not use this product before or after meals within 30 minutes.
15. Do not use without water.
16. Do not use while standing.
17. Please do not place your feet on the edge of the product to avoid collapsing the barrel and causing water to overflow.
18. Recommended water temperature range is 98 ℉ to 113 ℉ too high the product, which will break down the motor and will be out of work, temperature may harm the skin.
19. Please do not turn on the heating function before pouring water into.
20. We have designed a heating block in the middle of the product so the product has a heating function. Please turn on the bubble when using to speed up the spread of water heat to avoid being scalded.
21. Add water first and then electricity Do not press the start button before adding water.

Troubleshooting

Problem	Cause	Solution
No heating	Turn on the heating switch by middle when there is no water. Power not connected.	Works again after the temperature drops. Check power and make sure it is connected.
Stop during operation	Out of power. Set time is up. Water temperature has reached set temperature.	Check the power. Press the timer button again. Add cold water to cool down the temperature.
No response after pressing keys	Power switch contact or dead battery	Press the ON/OFF button repeatedly. Replace the battery of the remote control.

Product structure

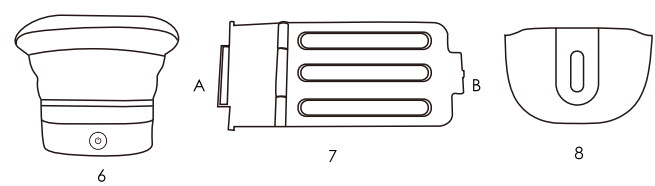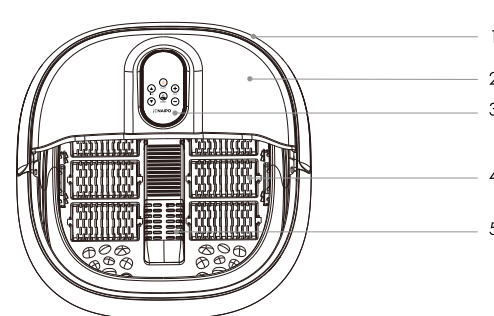

1. Handle
2. Front waterproof cover
3. Remote control
4. Massage rollers
5. Medicine box
6. ON/OFF button
7. Supporting frames
8. Bottom of Supporting frames B. Top of Supporting frame)

Control panel



01. After connecting the power supply, press ON/OFF button to turn on the foot spa massager. The display on the remote control shows 40 ℃ (104 ℉). When pressing TIME button, the display shows the time display state. When pressing TEMP button, the display will switch to the temperature display state. If there is no operation of the remote control within 4s, the display will return to the temperature display state. Press ON/OFF button to shut down.


- After shutting down, the display shows OFF about 5s and then enter the standby mode. At this time, the screen shows nothing.
1. **ON/OFF** (): When the foot spa massager is connected to the power supply, press ON/OFF button once to turn on the device. Press ON/OFF button once again to turn off the foot spa massager and all functions when powered on. When pressing the ON/OFF button, the bubble and heating function is on by default. The default temperature is 40 ℃ (104 ℉) and the default timer is 45 minutes. When the set time is up, the foot spa massager will automatically turn off all functions and shut down automatically.

- Warm Tip:** The ON/OFF button on the remote control is used in the same way as the ON/OFF button on the bottom of the foot spa massager. Just operate one of the button to turn on or off.
2. **TIME** (): Press TIME button to set the time when powered on. The time setting range is 10-60 minutes with a cycle of 5 min.

3. **TEMP** (): Press TEMP button to set temperature when powered on. Each press increases or decreases by 1 ℃ (33 ℉). The temperature setting range is 35 ℃ - 48 ℃ (95 ℉ - 118 ℉).

4. **BUBBLE** (): Press the BUBBLE button once to turn off the bubble function when powered on. Press the BUBBLE button once again to turn on this function.

Installation

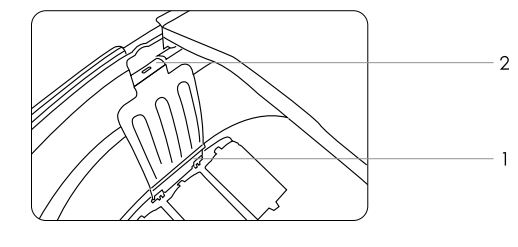

01. Take out the foot spa massager and place it on a flat surface. Open the dust cover cover, use one hand to press the middle of the product, and

02. Let the bottom of the supporting frame snap into the slot under the groove of the foot spa massager.
03. Pull up the side of the foot spa massager by hand, let the top of the supporting frame snap into place, until it is fixed with the foot spa massager.
04. Place the foot spa massager on the flat ground when in use. Connect to the household power outlet and add water to the 18cm mark. When used in winter, warm water around 38 ℃ (100 ℉) can be added directly to the foot spa massager.
05. Do not step on the cover or edge of the product when using. Otherwise, it may cause water overflow under pressure.
06. When the set temperature is reached, you will hear a beep to remind to enjoy the foot spa.
07. Five minutes before the end of the timer, the foot spa massager will emit three beeps sounds. When the time is up, the foot spa massager will turn off all functions and shut down.
08. Pour off the water after use. Fold away both sides of the supporting frame, then press down on both sides with both hands at the same time. The foot spa massager can be folded for easy storage.

Care and maintenance

01. Please unplug the plug after use or before cleaning, drain the water and wipe the inside of the massager dry.
02. Please place the foot spa massager in a cool and dry place. Avoid direct sunlight.