Naipo

User Manual
Full Body Shiatsu Massage Chair with Heat

Shenzhen Pinlong E-Commerce Co., Ltd.
Web: www.naipocare.com
E-mail: support@naipocare.com
Add: Huanan City Electronic Trading Building P05
Room 116, Longgang District, Shenzhen, China.

Made in China

Model: MGCHR-RK2106C

Contents

English ---------- 01~22
Deutsch ---------- 23~46

材质, 尺寸以供应商标准为准
印刷: 单黑双面印刷
装订方式: 骑马钉装订
(封面内页留白)

Function introduction

1. RK2106C is high-grade newly developed massage chair with original shape and full function.
2. S-shaped back rail meets human body's curve; four-roller massage mechanism gives you a comfortable feeling.
3. Rolling, kneading, pressing, tapping and massaging on head, neck, back, waist and hips can eliminate whole body's fatigue.
4. 6 air bags on two sides of seat, you can choose different modes by pressing button to remove fatigue easily.
5. 24 air bags in legrest and footrest give your shanks and feet pulse compression massage, which can promote circulation of blood capillary.
6. Heat function can promote blood circulation, eliminate fatigue and make you feel warm and comfortable
7. Upper cover of the armrest can be freely open/closed, a group of air bags on each of the two armrests, when the cover is open, it can massage arms, when closed, it will be naturally matched to the armrest.
8. Control with wide angle VFD display, active flip cover, intelligent sound&light navigation system. Open the cover to choose your favorite massage programs.
9. Adjust backrest and legrest with electric actuator; angle of backrest and legrest can be freely adjusted, which is more humanized.
10. Footrest can be flexibly stretched out or drawn back within 13.50 cm, ideal for people of different body height.
11. Mechanical drive and mute design bring you silence and gentle feeling.

Attention for safety

- Please read the manual carefully before use in order to install and operate the massager in correct way.
- "Attention for safety" is made into two terms of warning and caution. Please make sure that power switch is at "OFF" position before inserting the plug into the socket.

Warning	This sign indicates "warning of causing possible death, hurt to body".		
Caution	This sign indicates "caution of causing possible hurt,damage to things."		
	This sign indicates "forbidden behavior".		This sign indicates" self disassembly is forbidden".
	This sign indicates "must follow instruction to operate".		This sign indicates "correct operation way for wire".

Attention for safety

Warning

- During operation, if you feel abnormal or abnormal phenomenon occurs, please consult doctor to avoid any accident or bad effects to your body.
- Please turn off the power and pull off the plug if long time not in use,don't pull off the plug until all massage keys and power switch are turned off.
- Make sure there is nobody or something around (under, behind or in front of) the chair when using backrest, legrest up/down or legrest extension function.
- Please don't do too much massage on head.
- Before use, please check carefully if there is any defective cloth, for any minor broken cloth, please unplug the power and have it repaired instead of continuous use.

- Kids or babies are not allowed to use the massager nor play on it; standing or sitting on back or armrest is also not allowed.
- Those who can't express himself or can't operate it by himself are not allowed to use it in case of any accident or hurt.
- Power cord, plug, socket can't be used in broken or loose contact condition.
- Don't use other power except rated voltage in case of fire, electric shock or any breakdown.

Attention for safety

Warning

- Any broken, re-process, knotted, twisted and pressed power cord under heavy cargo is not allowed to use, especially under this massage chair; massage pad and other parts are forbidden to be stored in folding status otherwise it may cause short circuit, fire or electric shock.
- For any troubles in the massager, make sure to have it repaired by professional repairman, self-modification, disassembly or maintenance is forbidden.
- If power cord is damaged, please don't replace it by yourself, please contact us or appointed dealer for replacement.

Caution

- Please operate the chair in a flat or even place to avoid falling down.
- Please check if the massage heads are in correct position before you sit on the chair to avoid any possible accident or hurt.
- It is suggested that every operation time is 20 minutes and max. 5 minutes massage on same position may cause uncomfortable feeling. Please begin with slight-step massage mode.
- Please turn off the switch behind the massager after use to prevent children to play on it.

For sake of safety, please insert the plug into the socket with earth wire; the plug of earth wire can't be bended or removed in case of electric leakage or shock

- Don't press with hands or step on the massage nodes with feet.
- Don't put hands between the working massage nodes.
- Don't put hands or feet between mechanical parts.
- Don't stand or sit or put something on the backrest, armrest or legrest.
- Don't move the chair during it is working.
- Don't put your hands or head between legrest or place under it .
- Don't massage when you have hard hairpin on.
- No hard things inside the pocket while massaging hip or thighs.
- Don't pull out the plug or turn off the power during operation.

Attention for safety

Caution

- Please don't sleep during operating the chair.
- For drunk people or those who feel uncomfortable, please don't use the chair.
- No water, dust or other waste things is available on the power plug; otherwise it may cause fire, electric shock or short circuit.
- Operating the massage chair on heating items like electric heat blanket is strictly forbidden otherwise it may cause fire.
- Be careful not to drop or embed anything into the slot of massage chair in case of any damage to it.
- Don't put the chair in direct sunlight, or close to stove, heating machine system; otherwise it may fade leather surface.

- Please don't use or store it in the wet place like swimming pool, bathroom, etc.
- Keep dry on the control and chair itself, please don't operate the chair when you are in wet in case of electric leakage or shock
- Please unplug the power when repairing or cleaning the chair, don't touch plug with wet hands in case of electric shock or hurt.
- Please turn off the switch immediately when electricity is off in case of any possible accident or hurt when the electricity comes on again.
- Please be sure to take PLUG out of the socket instead of holding power cord to unplug it otherwise the plug may drop or cause electric shock troubles.

cleaning

- For normal use, clean it with dry cloth, chemical detergent is not allowed to use.
- For dirt or dust, please clean it with soft cloth with warm water or with neutral detergent, then re-clean it with twisted dry cloth, let it dry naturally, don't clean it with diluent of alcohol or gasoline

Earth wire is not allowed here

Gas pipe: probably cause explosion or fire.
Phone wire and lightning rod: probably cause electric shock and fire when thundering.
Water pipe: earth wire is useless where there are plastics.

Installation illustration

There are two packing ways for this chair: one is backrest folding packing, the other is backrest flat packing. for backrest folding packing, the two armrests are attached as parts of the chair; for backrest flat packing, the two armrests have already been installed onto the chair.

Step 1
Take the chair, left and right armrest out of packing carton by two or more people. No attached armrests if the chair has already been installed armrests.



Step 2
Raise the backrest backward until about 110° , the backrest is fixed in a correct position with a crash sound.

Step 3
Connect the air pipe on the armrest body to the pipe mouth on armrest cover, assembly the armrest onto the blowing parts of the armrest body, be sure to fully insert the air pipe into the square hose of blowing parts in case the air pipe is broken, push it forward and screw it on.
(same installation method for left and right armrest).

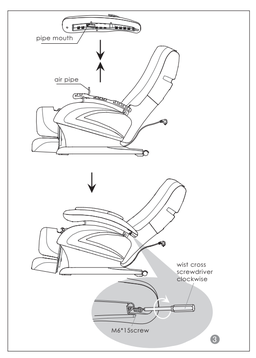

Step 4
Connect the back pad, head pad with the chair back.



Step 5
Install the control bracket to the right armrest with three screws, put the control into the control holder.

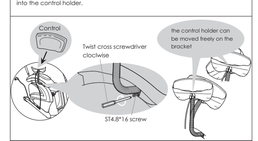

Step 6
After completing installation, turn on the power, open switch on the out side of right armrest, choose your favorite function to enjoy gentle and comfortable massage.



Name of external structure

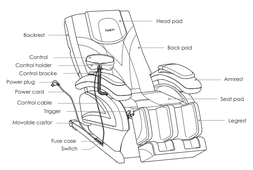

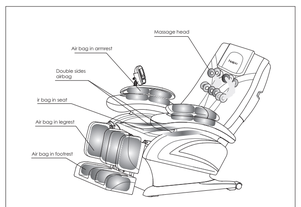

Remote control usage

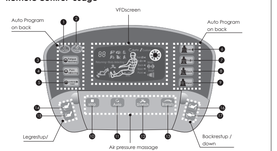

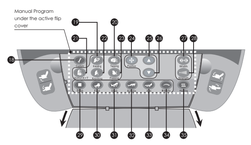

Remote control usage

1. Turn on/off the massage machine, when power is on, default working time displayed on VFD is 20mins."full course", "shoulder", "back", "waist" indicators will flash, you may choose auto massage program, i.e.press any one of the "full course", "shoulder", "back" and "waist" keys, then indicators of "fatigue recovery","pain relieving" and "comfortable mood" will flash, you may choose any one of them, the massage machine will automatically work as per your choice; open the cover below the screen and press "custom" key to choose your favorite massage function manually. Turn off the power, the massage machine will bestored automatically.
2. During working mode, press this key to set three shifts working time 10mins, 20mins and 30mins.
3. During working mode, press this key to choose "Fatigue recovery" function.
4. In auto mode, press this key to choose "Pain relieving" function.
5. In auto mode, press this key to choose "Comfortable mood" function.
6. In "ON" status, press this key to choose automatically upper body full course massage.
7. In "ON" status, press this key to choose automatically shoulder massage.
8. In "ON" status, press this key to choose automatically back massage.
9. In "ON" status, press this key to choose automatically waist massage.
10. In "ON" status, press this key to stop air pressure massage on hips, legs, feet and arms.
11. In "ON" status, press this key to choose automatic air pressure massage, VFD will display "AU".
12. In automatic air pressure working mode, press this key to open / close legrest stretching function.
13. In air pressure working mode, press this key to choose intensity of air pressure massage.
14. Press this key, the legrest will go up, release it, the legrest will stop going up.
15. Press this key, the legrest will go down, release it, the legrest will stop going down.
16. Press this key, the backrest will go up, legrest will go down; release it, the backrest and legrest will stop going up/down.
17. Press this key, the backrest will go down, legrest will go up; release it, the backrest andlegrest will stop going up/down.
18. In "ON" mode, press this key to choose your favorite massage function manually.
19. In "CUSTOM" mode, press this key to start kneading massage.
20. In "CUSTOM" mode, press this key to start tapping massage.
21. In "CUSTOM" mode, press this key to start "kneading and tapping" massage.
22. In "CUSTOM" mode, press this key to start knocking massage.
23. In "CUSTOM" mode, press this key to start pressing massage.

Remote control usage

24. In "CUSTOM" mode, press this key to choose massage position such as full course, shoulder, back, waist and fixed position
25. In "CUSTOM" mode, when you choose "Fixed massage position", press to slightly adjust massage position upward
26. In "CUSTOM" mode, when you choose "Fixed massage position", press to slightly adjust massage position downward
27. In "CUSTOM" mode, when you choose "tapping, pressing, hitting function", press this key to adjust width between two sets of rollers.
28. In "CUSTOM" mode, when you choose "tapping, kneading + tapping, hitting function", press This key to adjust massage intensity.
29. Press this key to stop air pressure massage on feet, shanks, hips and arms
30. In "ON" mode, press this key to open/close air pressure massage on feet.
31. In "ON" mode, press this key to open/close air pressure massage in shanks.
32. In "ON" mode, press this key to open/close air pressure massage in hips.
33. In "ON" mode, press this key to open/close air pressure massage in arms.
34. When air pressure is in "ON" mode, press this key to choose air pressure intensity on feet, shanks, hips and arms.
35. For RK2106C, in "ON" mode, press this key to turn on/off heat function on sole and waist.

Digital display: Standby is in "_ _" status showing balance working time, when the air pressure is in "ON" mode, press air pressure's "auto" key, it shows "AU"; press" intensity" key, it shows "E1", "E2", "E3", "E4" as different intensity lever, if the machine is in abnormal status, it shows "Er".

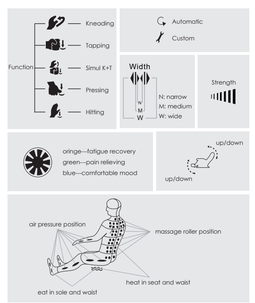



Operational method and function illustration

- **Operational procedure**

Step 1. Turn on power
1. Put the plug into socket
Open power switch on the bottom of the outside right of the armrest; the machine is on standby status.





Step 2. Massage
Choose massage function as per control operation instruction.

Step 3. Turn off the power
1. Press on/off key on the control to turn off the massage machine.
2. Turn off power switch on the bottom of the outside right of the armrest after the rollers stay at storage position.
3. Unplug the power from the socket.



- **Backrest up/down**

► Backrest down
Press " " key on the control, the backrest will go down and legrest will goup simultaneously. Release this key; the backrest and legrest will be fixed at locked angle.



◄ Backrest up
Press " " key on the control, the backrest will go up and legrest will go down simultaneously. Release this key; the backrest and legrest will be fixed at locked angle.

Operational method and function illustration

- **Legrest up/down**

► Legrest down
Press legrest " " key on the control, the legrest will go down slowly. Release this key, the legrest will be fixed at locked angle.



◄ Legrest up
Press legrest " " key on the control, the legrest will go up slowly. Release this key, the legrest will be fixed at locked angle.



- **Legrest stretched out/retracted**

► Legrest stretched out
Pull the trigger on the right of legrest backward till ideal angle while the feet stretch forward, the legrest will be fixed at this position, stretching range is within 13.50cm.



◄ Legrest retracted
Pull the trigger on the right of the legrest backward till ideal angle while the feet , the legrest will be fixed at this position, retracting range is within 13.50cm.



Please make sure there is nobody, no pet or nothing within permitted range for backrest and legrest to avoid any unexpected hurt or property loss. When you adjust the backrest, be careful with the gap between the backrest and armrest.

Operational method and function illustration

- **Arm-Massage**

Open upper cover of the armrest, put arms on the armrest, press "auto" key on the control or "arm" key under the active flip cover to enjoy air pressure massage.

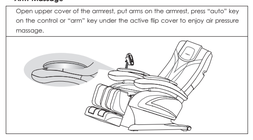

- **Moving**

Turn off the power and unplug it (it is better to make the chair in storage status to avoid any damage to the backrest when moving it) , pres down the backrest as showed in the picture, push the chair forward with the castors and put it down Slightly.

Note
Power cord should be wrapped on the chair seat in case of damage to it during moving.
Please put down the chair slightly otherwise some parts may be damaged due to rough handling.
Don't use castor on uneven ground.
Please don't push the chair on wood floor as the castor may scratch the floor, if needed, please raise the chair by two or more people working together.

- **Kind suggestion**

Due to the chair itself weight, long time pressure on the floor may leave Scratches on it. It is suggested that you put a piece of carpet or something soft for floor protection.

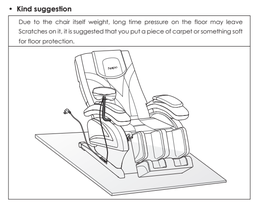

FAQ and troubleshooting data

Trouble	Possible reason	Troubleshooting
The massage chair can't work after power is on.		Open control switch; Choose massage function; Check plug and socket.
There is beep sound inside the massager while working.	It is sound of air pump, motor and mechanical parts.	normal ,Normal sound, no need to pay attention to it.
Sound sunddenly becomes much lounder while working	Check if it is due to long time working.	Turn off the power to have the massager rest for over half an hour before next turn working.
Massage function suddenly stops while working.	Setting time is up.	Turn off the power to have the massager rest for over half an hour before next turn working.
Neither the backrest nor the legrest can be lay down.	Check if there are any obstacles; the chair overloads; for the sake of safety, sometimes the massage machine may automatically stop working.	Remove the obstacles; turn off the power to have the massager rest for over half an hour before next turn working.
The chair can't return to its original position.	Excessive operation; setting time is up.	Turn off the power to have the massager rest for over half an hour before next turn working.
Power indicator doesn't come on even if turning on the power switch on the outside of the right armrest.	Check if the plug and socket are loose contact or not; Check if the fuse is blown out or not.	Make plug and socket is in good contact; Change fuse of same specification.

Note!
If above-mentioned reasons are not included, please turn off the power switch on the outside of the right armrest, unplug the power and contact your dealer or our company for repair or maintenance.

Name	Full Body Shiatsu Massage Chair with Heat
Type	MGCHR-RK2106C
Input voltage	AC 110V AC 220V ~ 240V 50 / 60 HZ
Working voltage	DC 110V
Power	260W
NW / GW	80/94 KG
Packing size (mm)	1160*795*850
Safety design	Class I

Funktionseinführung

1. RK2106C ist ein hochwertiger, neu entwickelter Massagesessel mit ursprünglicher Form und voller Funktionsfähigkeit.
2. Die S-förmige Rückenschiene ist auf die Rundungen des menschlichen Körpers abgestimmt; der Massagemechanismus mit vier Rollen verleiht Ihnen ein angenehmes Gefühl.
3. Rollen, Kneten, Drücken, Klopfen und die Massage an Kopf, Nacken, Rücken, Taille und Hüfte können die Ermüdung des Körpers vollständig beseitigen.
4. 6 Luftkissen auf beiden Seiten des Sessels und der Druckmassagemodus können die Müdigkeit einfach vertreiben.
5. Mit 24 Luftkissen in der Beinablage und Fußstütze erhalten Schenkel und Füße eine Impuls-Druckmassage für bessere Durchblutung.
6. Die Heilzfunktion fördert die Durchblutung, vertreibt die Müdigkeit und verleiht Ihnen ein warmes und angenehmes Gefühl.
7. Die obere Abdeckung der Armlehne kann einfach geöffnet/geschlossen werden. Mehrere Luftkissen auf den beiden Armlehnen können bei geöffneter Abdeckung die Arme massieren und passen sich bei geschlossener Abdeckung natürlich der Armlehne an.
8. Steuerung mit weitwinkligem VFD-Display, aktivem Klappdeckel, intelligentem Ton & Licht Navigationssystem. Um Ihr Lieblingsmassageprogramm auszuwählen, öffnen Sie den Deckel.
9. Verstellen Sie Rückenlehne und Beinablage über einen elektrischen Antrieb; die Winkel von Rückenlehne und Beinablage können frei eingestellt werden und sich dadurch dem menschlichen Körper besser anpassen.
10. Die Fußstütze kann innerhalb von 13,5 cm flexibel aus- und eingezogen werden, Es ist ideal für Personen mit unterschiedlichen Körpergrößen.

11. Durch den mechanischen Antrieb und das geräuschlose Design erhalten Sie Ruhe und ein sanftes Gefühl.

Auf Sicherheit achten

- Bitte lesen Sie für die Installation sorgfältig diese Anleitung, um den Massagesessel richtig zu bedienen.
- "Sicherheitswarnhinweise" bestehen aus zwei Begriffen: Warnung und Achtung.
- Bitte stellen Sie sicher, dass der Ein/Ausschalter auf "AUS" steht, bevor Sie den Stecker in die Steckdose stecken.

Warnung	Dieses Zeichen zeigt "Warnung vor möglichem Tod, Verletzungen" an.		
Vorsicht	Dieses Zeichen zeigt "Vorsicht vor möglichen Verletzungen, Sachbeschädigungen" an.		
	Dieses Zeichen zeigt "verbotene Verhaltensweisen" an.		Dieses Zeichen zeigt "Selbstdemontage ist verboten" an.
	Dieses Zeichen zeigt "Bedienungsanleitung befolgen" an.		Dieses Zeichen zeigt "richtige Bedienung der Kabel" an.

Auf Sicherheit achten

Warnung

- Wenn Sie sich während der Benutzung unnormal fühlen oder unvorhergesehene Probleme auftreten, konsultieren Sie bitte Ihren Arzt, um Unfälle oder schlechte Auswirkungen auf Ihren Körper zu vermeiden.
- Bei längerer Nichtbenutzung bitte die Stromversorgung abschalten und den Netzstecker ziehen. Ziehen Sie den Netzstecker erst dann, wenn alle Massagetasten und der Ein / Ausschalter abgeschalten sind.
- Beim Verwenden der Rückenlehne, Beinablage Auf/Ab oder der Ausziehfunktion der Beinablage dürfen sich keine Personen oder Gegenstände unter, hinter oder vor dem Sessel befinden.
- Bitte den Kopf nicht zu sehr massieren.
- Vor Inbetriebnahme überprüfen Sie bitte, ob der Stoff beschädigt ist. Auch bei der geringen Beschädigungen ziehen Sie bitte den Netzstecker und lassen Sie vor der weiteren Verwendung den Schaden reparieren.
- Die Kinder oder Babies dürfen den Massagesessel weder benutzen, noch darauf spielen; das Stehen oder Sitzen auf der Rücken- oder Armlehne ist ebenfalls untersagt.
- Personen, die sich nicht gut ausdrücken oder den Sessel nicht selbst bedienen können, ist die Benutzung untersagt, um Unfälle oder Verletzungen zu vermeiden.
- Netzkabel, Stecker und Steckdose dürfen nicht benutzt werden, wenn sie kaputt sind oder losen Kontakt haben.
- Bei Feuer, Stromschlag oder sonstigen Störungen keine andere Stromversorgung außer der Nennspannung verwenden.

Auf Sicherheit achten

Warnung

- Defekte, bearbeitete, verknotete, verdrehte und unter schwerer Last zerdrückte Netzkabel dürfen niemals und insbesondere nicht mit diesem Massagesessel verwendet werden; Massagekissen und andere Teile dürfen nicht gefaltet aufbewahrt werden, dies könnte Kurzschluss, Feuer oder Stromschlag verursachen.
- Wenn Probleme mit dem Massagesessel auftreten, lassen Sie ihn unbedingt von einem professionellen Fachmann reparieren. Änderungen, Demontage oder Wartungsarbeiten selbst vorzunehmen, ist untersagt.
- Tauschen Sie ein defektes Netzkabel nicht selbst aus, sondern wenden Sie sich für den Austausch an uns oder einen autorisierten Händler.

Achtung

- Bitte benutzen Sie den Sessel auf einer flachen und ebenen Oberfläche, um zu verhindern, dass er umfällt.
- Bitte kontrollieren Sie, ob die Massageköpfe ordnungsgemäß positioniert sind, bevor Sie sich in den Sessel setzen, um eventuelle Unfälle oder Verletzungen zu vermeiden.
- Wir empfehlen eine Betriebsdauer von 20 Min. und die Massage an einem Punkt für höchstens 5 Min.; bitte beginnen Sie zunächst mit einer leichten Massage; eine längere Massage an derselben Stelle kann ein unangenehmes Gefühl hervorufen.
- Bitte schalten Sie nach der Benutzung den Schalter auf der Rückseite des Massagesessels aus, um zu verhindern, dass Kinder darauf spielen.
- Aus Sicherheitsgründen stecken Sie bitte den Stecker in eine geerdete Steckdose; Stecker oder Erdleitung können im Falle von Leckstrom oder Stromschlag nicht gebogen oder entfernt werden.

- Nicht mit den Händen auf die Massageköpfe drücken oder mit den Füßen darauf treten.
- Die Hände nicht zwischen die Massageköpfe lege, wenn sie in Betrieb sind.
- Die Hände oder Füße nicht in die Zwischenräume der mechanischen Teile legen.
- Nicht auf die Rückenlehne, Armlehne oder Beinstütze stehen oder sitzen oder Gegenstände darauf legen.
- Den Sessel während des Betriebs nicht bewegen.
- Legen Sie ihre Hände oder den Kopf nicht zwischen die Beinablagen oder darunter.
- Führen Sie keine Massage durch, wenn Sie Haarspangen tragen.
- Beim Massieren der Hüfte oder Oberschenkel dürfen sich keine Gegenstände in Ihren Taschen befinden.
- Während des Betriebs nicht den Netzstecker ziehen oder ausschalten.

Auf Sicherheit achten

Achtung

- Bitte während der Benutzung des Sessels nicht einschlafen.
- Personen, die betrunken sind oder sich nicht wohl fühlen, sollten den Sessel bitte nicht benutzen.
- Der Netzstecker muss frei von Wasser, Staub oder sonstigen Verschmutzungen sein; ansonsten könnten Feuer, Stromschlag oder Kurzschluss die Folge sein.
- Die Benutzung des Massagesessels auf Wärmequellen wie z.B. einer elektrischen Heizdecke ist strengstens untersagt, weil dies Feuer verursachen kann.
- Achten Sie darauf, dass keine Gegenstände in den Schlitz des Massagesystuhls fallen oder eingeleigt werden, um ihn nicht zu beschädigen.
- Setzen Sie den Sessel keiner direkten Sonneneinstrahlung aus oder stellen Sie ihn nicht neben einen Ofen oder sonstige Heizgeräte; die Lederoberfläche könnte verblassen.

- Bitte nicht an feuchten Orten wie z.B. einem Schwimmbad, Badezimmer, etc. benutzen.
- Die Steuerung und den Sessel trocken halten, bitte den Sessel nicht benutzen, wenn Sie nass sind, um Leckstrom oder Stromschlag zu vermeiden.
- Bitte bei Reparatur oder Reinigung des Sessels den Netzstecker ziehen, den Stecker nicht mit nassen Händen berühren, um Stromschlag oder Verletzungen zu vermeiden.
- Bitte bei Stromausfall den Schalter sofort ausschalten, um mögliche Unfälle oder Verletzungen zu vermeiden, wenn die Stromversorgung wieder funktioniert.
- Bitte fassen Sie beim Ziehen des Netzsteckers den STECKER und nicht das Netzkabel an, der Stecker könnte ansonsten herabfallen und Stromschlag verursachen.

Reinigung

- Bei normaler Benutzung mit einem trockenen Tuch reinigen, chemische Reinigungsmittel sind nicht erlaubt.
- Schmutz oder Staub bitte mit einem weichen Tuch mit warmem Wasser oder Neutralreiniger abwischen, dann mit einem trockenen Tuch nachreiben, lufttrocknen lassen, nicht mit Verdünnungsmitteln wie Alkohol oder Benzin reinigen.

Erdleiter ist hier nicht erlaubt

Gasrohr: Es kann Explosion oder Feuer verursachen.
Telefonleitung und Blitzableiter: Es kann bei Gewitter Stromschlag und Feuer verursachen.
Wasserleitung: Die Erdleitung ist beim Kunststoff nutzlos.

Installationsabbildung

Schritt 1
Nehmen Sie den Sessel und die linke und rechte Armlehne mithilfe von zwei oder mehr Personen aus dem Karton. Armlehnen müssen nicht befestigt werden, wenn sie vorinstalliert sind.



Schritt 2
Heben Sie die Rückenlehne rückwärts bis ca. 110° an, die Rückenlehne rastet hörbar in der richtigen Position ein.

Schritt 3
Verbinden Sie den Luftschlauch am Gehäuse der Armlehne mit der Schlauchöffnung an der Abdeckung der Armlehne, montieren Sie die Armlehne auf die Luftöffnungen der Armlehne und stellen Sie sicher, dass der Luftschlauch vollständig in den rechteckigen Schlauch der Luftöffnungen passt. Falls der Luftschlauch defekt ist, drücken Sie ihn nach vorne und schrauben ihn fest.
(dasselbe Installationsverfahren für die linke und rechte Armlehne).

Installationsabbildung

Schritt 4
Verbinden Sie das Rücken- und Kopfpolster mit der Rückenlehne.



Schritt 5
Installieren Sie die Klammer für die Steuerung mit drei Schrauben an der rechten Armlehne, stecken Sie die Steuerung in die Halterung.

Schritt 6
Nach der Fertigstellung der Installation schalten Sie die Stromversorgung ein, aktivieren den Schalter außen an der Armlehne und wählen Ihre Lieblingsfunktion, um eine sanfte und angenehme Massage zu genießen.

Bezeichnungen des externen Aufbaus

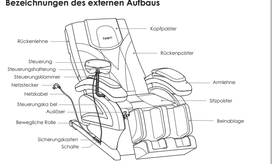

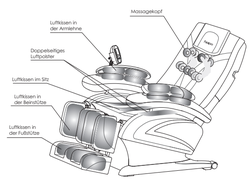

Verwendung der Fernbedienung

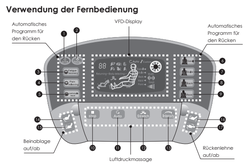

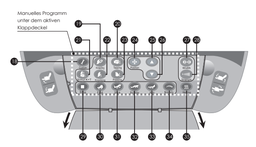

Verwendung der Fernbedienung

1. Massagegerät ein/ausschalten, nach dem Einschalten wird die Standard Betriebszeit von 20 Min. auf dem VFD-Display angezeigt, die Anzeigen "Ganzkörper", "Schulter", "Rücken", "Taille" blinken, ein automatisches Massageprogramm kann gewählt werden, d.h. Sie drücken eine der Tasten "Ganzkörper", "Schulter", "Rücken" oder "Taille", dann blinken die Anzeigen "Erholung", "Schmerzlinderung" und "Wohlfühlen", wählen Sie eine aus und das Massagegerät wird laut Ihrer Auswahl automatisch funktionieren; öffnen Sie die Abdeckung unter dem Display und drücken Sie die Taste "Standard", um Ihre Lieblingsmassagefunk tion manuell auszuwählen, schalten Sie die Stromversorgung aus und es erfolgt eine automatische Speicherung.
2. Drücken Sie im Arbeitsmodus diese Taste, um drei verschiedene Betriebszeiten einzustellen: 10 Min., 20 Min. und 30 Min..
3. Im Betriebsmodus drücken Sie diese Taste, um die Funktion "Erholung" auszuwählen.
4. Im Automatikmodus drücken Sie diese Taste, um die Funktion "Schmerzlinderung" auszuwählen.
5. Im Automatikmodus drücken Sie diese Taste, um die Funktion "Wohlfühlen" auszuwählen.
6. Im Status "EIN" drücken Sie diese Taste, um automatische Ganzkörpermassage auszuwählen.
7. Im Status "EIN" drücken Sie diese Taste, um automatische Schultermassage auszuwählen.
8. Im Status "EIN" drücken Sie diese Taste, um automatische Rückenmassage auszuwählen.
9. Im Status "EIN" drücken Sie diese Taste, um automatische Taillenmassage auszuwählen.
10. Im Status "EIN" drücken Sie diese Taste, um die Luftmassage an Hüften, Beinen, Füßen und Armen zu stoppen.
11. Im Status "EIN" drücken Sie diese Taste, um automatische Luftdruckmassage auszuwählen, am VFD wird "AU" angezeigt.
12. Im automatischen Luftduck-Betriebsmodus drücken Sie diese Taste, um die Ausziehfunktion der Beinablage zu aktivieren/deaktivieren.
13. Im Luftdruck-Arbeitsmodus drücken Sie diese Taste, um die Intensität der Luftdruckmassage einzustellen.
14. Halten Sie diese Taste gedrückt und die Beinstütze wird angehoben, lösen Sie diese Taste und die Beinstütze wird gestoppt.
15. Halten Sie diese Taste gedrückt und die Beinstütze geht nach unten, lösen Sie sie und die Beinstütze wird gestoppt.
16. Halten Sie diese Taste gedrückt und die Rückenlehne wird angehoben, gleichzeitig wird die Beinstütze abgesenkt. Lösen Sie die Ta